



## Operating manual

**bks+6/FIU**  
Ultrasonic web edge sensor  
with analogue output and  
IO-Link interface



### Product Description

The bks+ ultrasonic web edge sensor is a fork sensor for scanning the edges of sound-impermeable and slightly sound-permeable materials such as foil or paper. The fork's lower leg is equipped with an ultrasonic sensor which cyclically emits short sound impulses, which are detected by the ultrasonic receiver accommodated in the upper fork leg. Material immersing into the fork covers this sound path and thus attenuates the receive signal, which is evaluated by the internal electronics. An analogue signal and a binary value via IO-Link is output in dependence of the coverage degree. The bks+6/FIU optional can be programmed using the LinkControl-Adapter LCA-2 and LinkControl software.

- Via the Teach-in button on the edge sensor's top or via Pin 5 on the device plug, the sensor can be adjusted to the material to be controlled.
- Choosing between rising and falling output characteristic is possible.
- Three LEDs indicate the position of the web material inside the fork.

### IO-Link

The bks+6/FIU sensors are IO-Link-capable in accordance with IO-Link specification V1.1.

### Safety Notes

- Read the operating instructions prior to start-up.
- Connection, installation and adjustment works may only be carried

- ried out by expert personnel.
- No safety component in accordance with the EU Machine Directive.

### Installation

- Mount the sensor at the installation site.
- Connect a connection cable to the M12 device plug.

### Start-Up

- Connect the power supply.
- Carry out the adjustment to the web material in accordance with the diagram.

### Synchronisation

If two or more edge sensors are mounted in a distance < 50 mm the internal synchronisation should be

used. Connect Sync-channels (Pin 5 at the units receptacle) of all sensors.

### Factory setting

- Analogue output on voltage output
- Rising analogue characteristic (0 V at maximum coverage)
- Switched output on NOC
- Switched output window is ± 4.5 mm around zero position.

### Maintenance

microsonic sensors are maintenance-free. With heavy dirt deposits, we recommend a cleaning of the white sensor surface.

### Notes

- Working range and gradient of the analogue output curve depend on

the ultrasonic transducers and cannot be adjusted. The working range always is ≥ 40 mm.

- For sound-impermeable materials the sensor can be adjusted to the environmental conditions by the 1-point adjustment procedure.
- For slightly sound-permeable materials the sensor has to be set up to the material and the environmental conditions by using the 2-point adjustment. Carry out a practical test to find out whether a material is slightly sound-permeable.
- For optimum measurement results the material to be detected should be kept in a range of ± 5 mm around the centre between the upper and lower fork leg.

## Contact


### Sensor Partners BV

James Wattlaan 15  
5151 DP Drunen  
The Netherlands  
+31 (0)416 - 37 82 39  
info@sensorpartners.com  
sensorpartners.com

### Sensor Partners BVBA

Z.1 Researchpark 310  
B-1731, Zellik  
Belgium  
+32 (0)2 - 464 96 90  
info@sensorpartners.com  
sensorpartners.com

### Sensor adjustment with Teach-in procedure

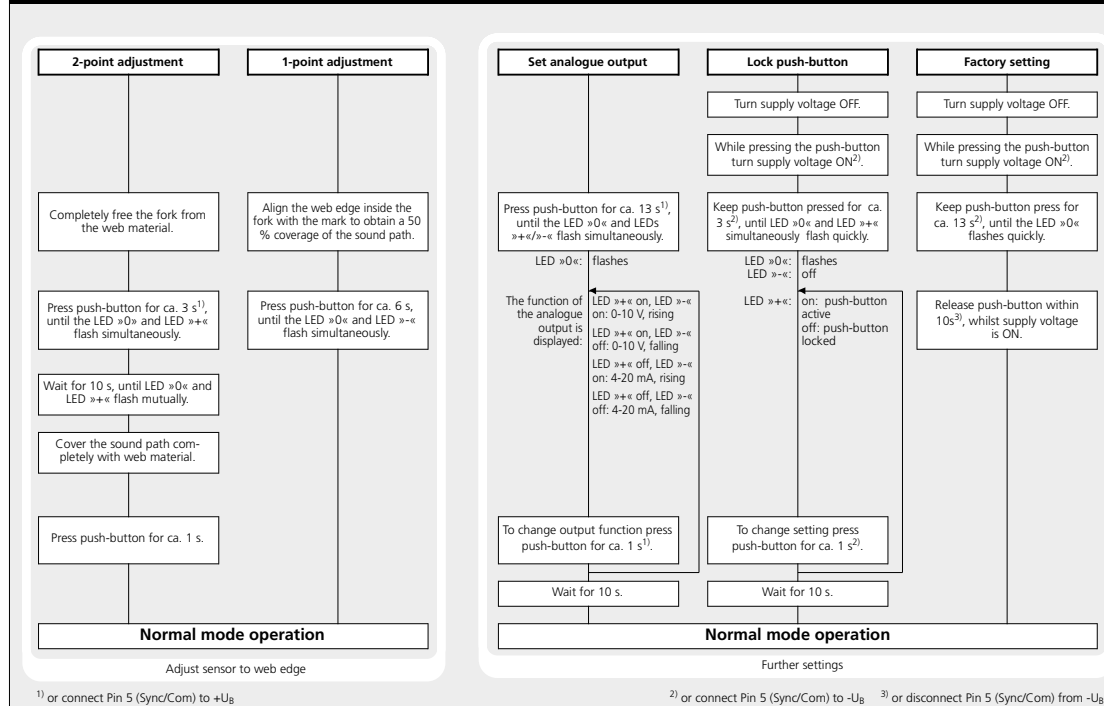

### Technical data

<b>fork width</b>	60 mm
<b>fork depth</b>	73 mm
<b>working range</b>	≥ 40 mm (± 20 mm)
<b>transducer frequency</b>	ca. 310 kHz
<b>resolution</b>	0.02 mm
<b>reproducibility</b>	± 0.1 mm
<b>operating voltage U<sub>B</sub></b>	20 to 30 V DC, reverse polarity protection
<b>voltage ripple</b>	± 10 %
<b>no-load current consumption</b>	≤ 60 mA
<b>housing</b>	zinc die cast chromed, plastic parts: PBT ultrasonic transducer: polyurethane foam, epoxy resin with glass contents
<b>class of protection to EN 60 529</b>	IP 65
<b>type of connection</b>	5-pin M12 initiator plug, brass, nickel-plated
<b>controls</b>	Teach-in-button
<b>indicators</b>	LED green: center or within switching window LEDs yellow: deviation from centre/switching window
<b>programmable synchronisation</b>	LCA-2 with LinkControl internal synchronisation up to 10 sensors
<b>operating temperature</b>	+5°C to +60°C
<b>storage temperature</b>	-40°C to +85°C
<b>weight</b>	280 g
<b>response time</b>	6 ms
<b>repetition rate</b>	4 ms
<b>time delay before availability</b>	< 300 ms
<b>order no.</b>	<b>bks+6/FIU</b>
<b>analogue output</b>	current output 4-20 mA voltage output 0-10 V
<b>switched output</b>	short-circuit-proof, switchable rising/falling Push-Pull, U <sub>B</sub> -3V, -U <sub>B</sub> +3 V, I <sub>max</sub> = 100 mA switchable NOC/NC, short-circuit-proof

1 Push-Pull switched output and analogue output

- The sensor can be reset to its factory settings (see »Sensor adjustment with Teach-in procedure, further settings«).
- Using the LinkControl-Adapter LCA-2 (optional accessory) and the LinkControl-Software V7.6 all Teach-in- and additional sensor parameter settings may be made.
- Depending on the function the ultrasonic transducers in the upper and lower fork leg are mounted with a slope of 2°.

## IO-Link Mode

The bks+6/FIU sensors are IO-Link-capable in accordance with IO-Link specification V1.1 and compatible to specification V1.0.

### Note

- In IO-Link mode Teach-in and LinkControl are not available.

### Process data

The bks+ cyclically transmits the value corresponding to the measured coverage degree with a resolution of 0.01 mm.

### Service data

The following sensor parameters may be set via IO-Link.

### Teach-in via push-button

The push-button can be activated/deactivated for sensor settings with Teach-in.

### Temperature compensation

The temperature compensation is used for measurement value correction for varying ambient temperatures and can be disabled.

### Analogue output mode

For the analogue output either the function output voltage or current

output can be selected.

### Rising / falling analogue characteristic

The analogue characteristic can be set on rising (0 V / 4 mA at full coverage) or falling characteristic.

### Set NOC/NCC

The NCC or NOC output function can be preset for the switched output.

### Switching off the LEDs

When activated, the LEDs are switched off 30 seconds after a key press. After a new key press they will run for 30 seconds. This automatic

shutdown can be deactivated.

### Measurement filter

bks+ ultrasonic sensors provide for a choice of 3 filter settings:

- F00 (no filter)

Each ultrasonic measurement acts on the output in an unfiltered manner.

- F01 (average value filter)

Forms approximately the arithmetic mean of several measurements. According to the mean value the output is set. The number of measurements, from which the mean is formed is dependent on the chosen filter strength.

- F02 (median filter)

Finds the median of several measurements. According to the median the output is set. The number of measurements, for which the median is determined is dependent on the selected filter strength.

### Filter strength

For both measurement value filters, a filter strength between P00 (weak filter effect) and P09 (strong filter effect) can be selected.

### Switching window

If the web edge is within the switching window the switching output is set. The switching window is defined by the adjusted center and the width.

### Note

The switching window has to be within the operating range.

### System commands

With 5 system commands the following settings may be carried out:

- restore IO-Link parameters to their factory settings
- sensor adjustment: fork cleared.
- sensor adjustment: fork 50 % covered
- sensor adjustment: fork 100 % covered
- reset all sensor parameters including the IO-Link parameters to their factory settings.

### Events

The bks+ sensor sends the following events:

- parameter was changed
- sensor adjustment successful
- sensor adjustment failed

### IODD file

The latest IODD file you will find on the internet under [www.microsonic.de/en/IODD](http://www.microsonic.de/en/IODD).

For further informations on IO-Link see [www.io-link.com](http://www.io-link.com).

IO-Link Data					
<b>physical layer</b>					
IO-Link revision	V1.1				
compatibility	V1.0				
block parameter	yes				
data storage	yes				
SIO mode support	yes				
min cycle time	4 ms				
baud rate	COM 2				
format of process data	16 Bit, R, UNI16				
content of process data	Bit 0-15: degree of coverage with 0.01 mm resolution				
<b>service data IO-Link specific</b>					
	index	access	value		
vendor name	0x10	R	microsonic GmbH		
vendor text	0x11	R	www.microsonic.de		
product name	0x12	R	bks+		
product ID	0x13	R	bks+6/FIU		
product text	0x14	R	Ultraschall-Sensor		
<b>service data sensor specific</b>					
	index	format	access	range	default
Teach-in via push-button	0x40	UINT8	R/W	0: activated; 1: deactivated	0
linearisation of the output characteristic	0x41	UINT8	R/W	0: parameter without function	0
temperature compensation	0x42	UINT8	R/W	0: deactivated; 1: activated	1
analogue output mode	0x44	UINT8	R/W	2: current output, 3: voltage output	3
rising/falling output characteristic curve	0x45	UINT8	R/W	0: rising characteristic curve; 1: falling characteristic curve	1
NCC/NOC	0x46	UINT8	R/W	0: NOC; 1: NCC	1
automatic turning-off LEDs	0x48	UINT8	R/W	0: deactivated; 1: activated	1
measurement filter	0x4D	UINT8	R/W	0-2: F00-F02	0
filter strength	0x4E	UINT8	R/W	0-9: P00-P09	0
centre of switching window	0x4F	UINT16	R/W	0-4,095 <sup>1)</sup>	2,047
width of switching window	0x50	UINT16	R/W	0-4,095 <sup>1)</sup>	1,023
<b>system commands</b>					
	index	access	value		
restore IO-Link parameter	0x02	W	130		
sensor adjustment: fork cleared	0x02	W	161		
sensor adjustment: fork 50 % covered	0x02	W	162		
sensor adjustment: fork 100 % covered	0x02	W	163		
reset to factory setting	0x02	W	164		
<b>events</b>					
	code	typ	name		
	0x8ca0	Notification	parameter was changed		
	0x8ca1	Notification	sensor adjustment successful		
	0x8ca2	Notification	sensor adjustment failed		
<b>observe</b>					
	index	format	access	range	
measurement value	0x54	UINT16	R	0-4,095 <sup>1)</sup>	

<sup>1)</sup> The value range 0-4,095 corresponds with the working range of the sensor.

